



Pos.	Artikelbeschreibung	Description of item	Artikel Nr./Item No.
1	Kontrolllampe, grün 230V, 14A	Green indicator light 230V, 14A	A039883
2	Kontrolllampe, gelb 230V, 14A	Yellow indicator light 230V, 14A	E0301130005
4	Abdeckung, hinten	Back cover	A040459
4+5	Gehäuse z. Schaltkasten	Housing f. switch box	A040460
6	Sicherheitsthermostat EGO 230°C	Safety thermostat EGO 230°C	016240438
7	Mikroschalter, komplett	Microswitch complete	016240435
	Mutter z. Mikroschalter	Nut f. mircoswitch	E0302201242
8	Anschlussklemme	Terminal clamp	A040461
9	Thermostat EGO 220V, 190°C	Thermostat EGO 220V, 190°C	A039882
10	Knebel z. Thermostat	Knob f. thermostat	E0301110479
12	Zugentlastung	Strain relief	016240434
13	Anschlusskabel m. Stecker	Power cord w. plug	A039896
14	Griff f. Gehäuse m. Schrauben	Handle f. housing with screws	n.m.lieferbar/n.m.available
	Griff f. Gehäuse m. Schrauben	Handle f. housing with screws	E0302070011
15	Gehäuse	Housing	E020109027410
16	Fuß, Gummi, schwarz Ø 30 x 15 mm	Base, rubber, black Ø 30 x 15	A042567
17	Becken	Basin	016240425
18	Deckel	Lid	A040920
19	Krümelsieb	Crumb sieve	016240418
20	Ersatzkorb Fritteuse "SNACK", 4L	Sub.basket deep f. fryer "SNACK",4L	165522
21	Abdeckung z. Heizkörper	Cover f. heating element	01624049
22 + 23	Heizkörper 230V, 50Hz	Heating element 230V, 50Hz	A039885
24	Korbaufhängung	Rod f. hanging basket	016240426
25	Griff z. Korb, Kunststoff	Handle f. basket, plastic	A041303
26	Klemme groß	Big clamp	016210820
27	Griff z. Deckel	Handle f. lid	A040913
28	Dichtung z. Temperaturfühler	Gasket f. temperature sensor	016240433
29	Bedienfeldfolie	Control panel sticker	E0A16240227
o.Abb/n.pic.	Schaltkasten, Elektro	Switch box, electric	A040457
o.Abb/n.pic.	Stütze m. Verschraubung	Support w. screw connection	A040572



Fritteuse "SNACK I"
Artikel-Nr.: A162410E

Ersatzteilliste
04.01.2016