

SPARTA 441 BP Brushcutter



Documents

[Engine](#)

[Ignition system](#)

[Tank and air filter](#)

[Transmission](#)

[Frame - Accessories](#)

[Carburetor WT-1099](#)

[Illustrated parts list \(Head "Load and Go" Ø130\)](#)

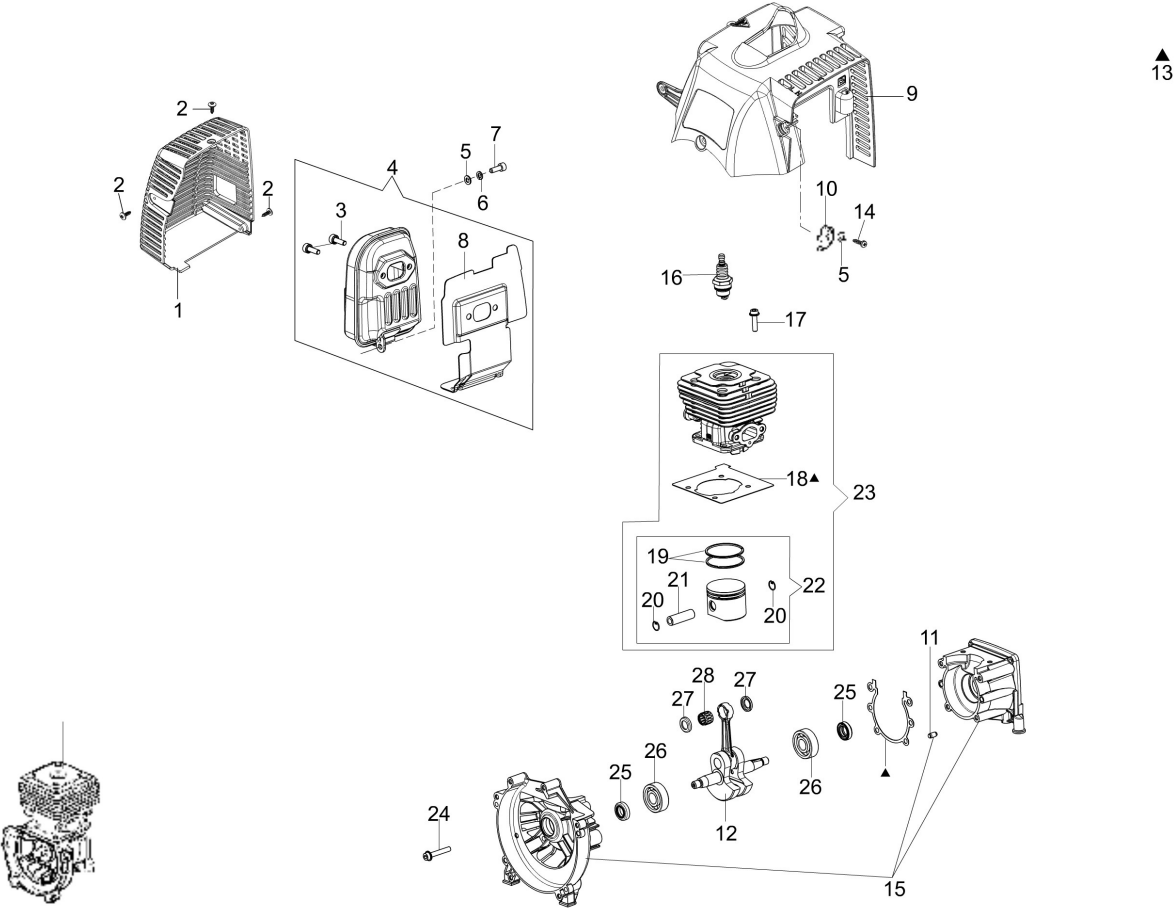


Illustration Engine

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	61330168R	Muffler cover				
2	3	3960121R	Screw				
3	2	005100906AR	Screw				
4	1	61330192CR	Complete muffler				
5	3	3916005R	Washer				
6	1	3819006R	Washer				
7	3	3801010R	Screw				
8	1	61330125R	Deflector				
9	1	61330118R	Cylinder cover				
10	1	61200064R	Stopper				
11	4	3023008R	Plug				
12	1	61200001R	Crankshaft				
13	1	61202038BR	Gasket set				
14	1	3960069AR	Screw				
15	1	61330067	Crankcase assy				
16	1	3055115	Spark plug bpmr7a				
17	4	094000101R	Screw				
18	1	61350272R	Gasket				
19	2	4196166R	Piston ring				
20	2	004900061R	Ring				
21	1	50110047R	Piston pin				
22	1	50120034A	Piston assy Ø40				
23	1	61330204	Complete cylinder Ø40				
24	4	3860096R	Screw				
25	2	094000099R	Seal ring				
26	2	094000006R	Bearing				
27	2	50110043AR	Spacer				
28	1	50110044R	Bearing				

Illustration Ignition system

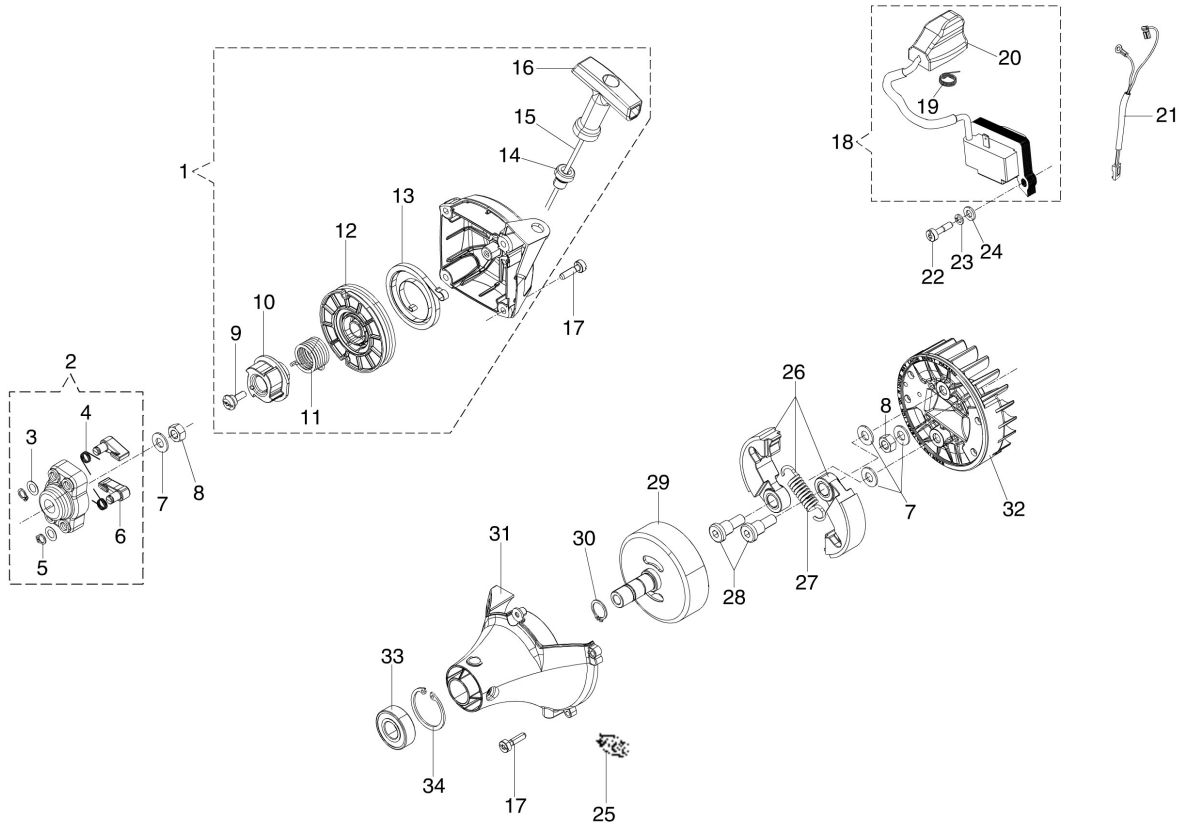


Illustration Ignition system

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	61332012R	Starter assy				
2	1	61330197	Clutch driver				
3	2	3064010R	Washer				
4	2	4191017A	Spring				
5	2	3024007R	Ring				
6	2	61350145R	Pawl				
7	1	3818011AR	Washer				
8	1	3912009	Nut				
9	1	50160024	Screw				
10	1	61350204AR	Sprocket				
11	1	61350203BR	Spring				
12	1	61350139R	Starter pulley				
13	1	004000132R	Spring				
14	1	072700089R	Bushing				
15	1	4098073R	Starter rope				
16	1	61200015R	Starter handle				
17	9	3801010R	Screw				
18	1	61250015BR	Ignition coil				
19	1	50050127	Spring				
20	1	61200012AR	Spark plug cap				
21	1	61250216R	Cable				
22	1	3901082R	Screw				
23	1	3819006R	Washer				
24	1	3916006R	Washer				
25	1	4197011R	Pin				
26	1	4191153BR	Clutch				
27	1	4191028R	Spring				
28	2	4191027FR	Pin				
29	1	4193005R	Clutch drum				
30	1	3024015R	Ring				
31	1	62040029R	Starter case				
32	1	61250014AR	Flywheel				
33	1	3035042R	Bearing				
34	1	3025022R	Ring				

Illustration Tank and air filter

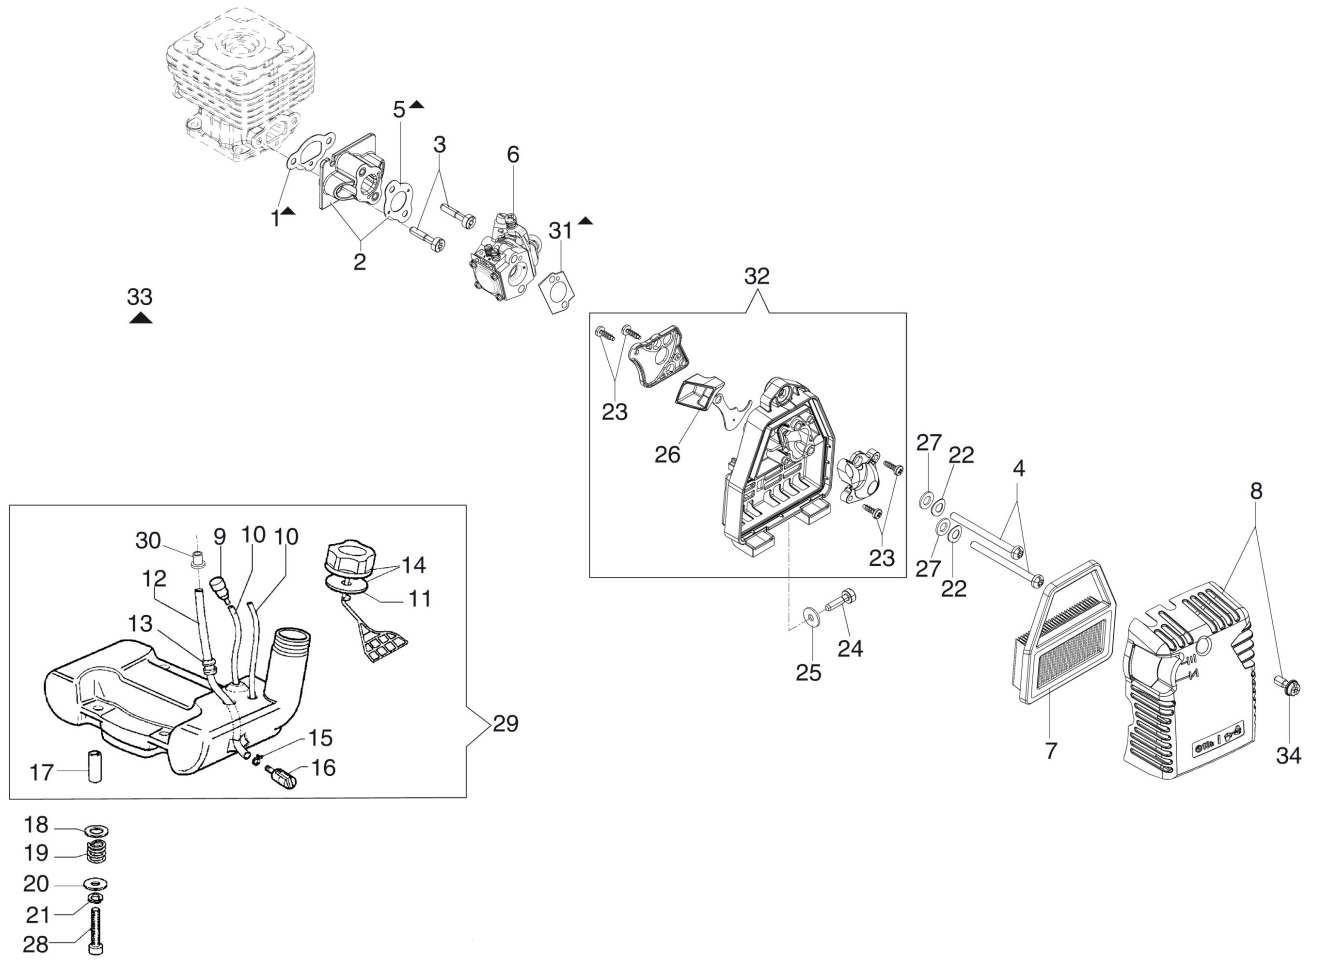


Illustration Tank and air filter

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	61200019AR	Gasket				
2	1	61200198	Insulator				
3	2	3801015R	Screw				
4	2	3891067R	Screw				
5	1	61200196AR	Gasket				
6	1	2318987R	Carburetor WT-1099				
7	1	61380013AR	Air filter				
8	1	61330131	Filter cover kit				
9	1	61070011AR	Breather valve				
10	2	58070224R	Tube				
11	1	61070006R	Gasket				
12	1	3073014R	Tube				
13	1	4161211R	Bush				
14	1	61372003R	Tank cap				
15	1	4098377R	Band				
16	1	50010218R	Fuel filter				
17	4	61200128R	Spacer				
18	4	3916008R	Washer				
19	4	61200129R	Spring				
20	4	3918005R	Washer				
21	4	3819006R	Washer				
22	2	3833073R	Washer				
23	4	3960087AR	Screw				
24	1	3891048R	Screw				
25	1	3918005R	Washer				
26	1	61380074AR	Starter lever				
27	2	3916005R	Washer				
28	4	3801016R	Screw				
29	1	61390015R	Complete tank				
30	1	61280105	Band				
31	1	61350155R	Flange				
32	1	61382040AR	Air filter support set				
33	1	61202038BR	Gasket set				
34	1	61330040AR	Screw				

Illustration Transmission

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	4197056AR	Guard assy				
2	1	61330207	Handle				
3	1	61380055AR	Lever				
4	1	61380096	Lever group				
5	1	4100098BR	Spring				
6	1	56550185R	Button				
7	5	3893016AR	Screw				
8	1	61380056R	Throttle lever				
9	1	3801011R	Screw				
10	1	61010019	Band				
11	1	3914003R	Nut				
12	1	3960067AR	Screw				
13	1	61390026R	Engine stop wire				
14	1	044000058A	Cable joint				
15	1	61390016R	Throttle cable				
16	1	61390011	Sheath				
17	1	61390025R	Throttle cable				
18	4	3801017R	Screw				
19	4	3819006R	Washer				
20	6	3918010R	Washer				
21	1	61010024R	Clamp				
22	1	62042006R	Handle				
23	2	3801015R	Screw				
24	1	61042026R	Guard				
25	2	62020012	Eyelet				
26	1	61390012R	Tube				
27	1	4197019R	Shaft				
28	1	62042012R	Extension				
29	1	4193078	Spring				
30	1	4197004R	Joint				
31	1	3022010	Plug				
32	1	3049009	O-ring				
33	1	4197062	Guard				
34	1	62040046R	Drive shaft				
35	1	3049008R	O-ring				
36	1	62040048R	Flexible assy				
37	1	61250237A	Set bevel gear Ø26 + insert				
38	1	61040132A	Bevel gear set				
39	1	3025009	Ring				
40	1	4138311A	Ring				
41	1	3025018R	Ring				
42	1	3024010R	Snap ring				
43	1	3035230R	Bearing				
44	1	3034008R	Bearing				
45	1	3901016	Screw				

Illustration Transmission

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
46	1	61040071R	Cap				
47	1	61050013R	Gear case				
48	1	3034218R	Bearing				
49	1	61250054R	Pin				
50	1	3034012R	Bearing				
51	1	3025022R	Ring				
52	1	61040066R	Spacer				
53	1	3050018R	Seal ring				
54	1	61040145R	Hub				
55	1	4179089R	Flange				
56	1	61110074R	Guard				
57	1	61110075R	Nut				
58	1	4197072	Grip-end				
59	1	4161598AR	Spacer				

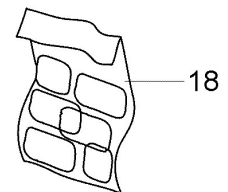
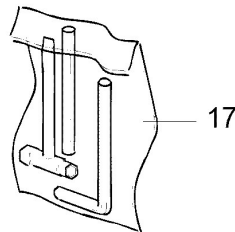
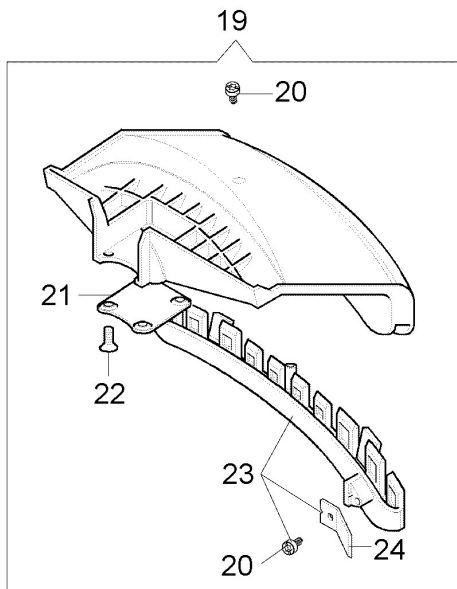
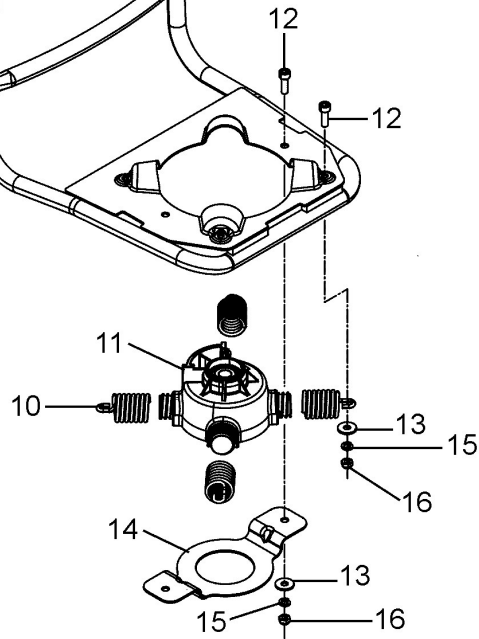
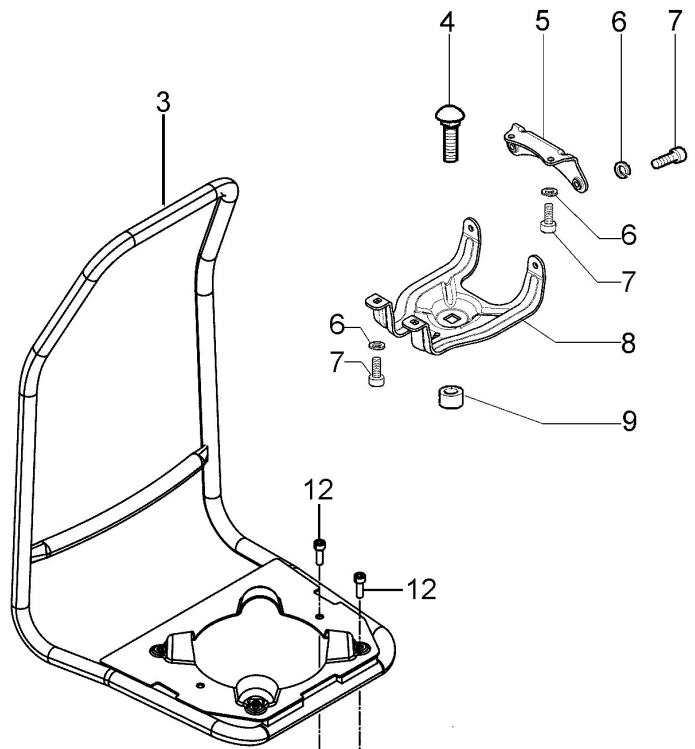
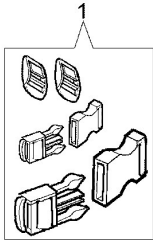
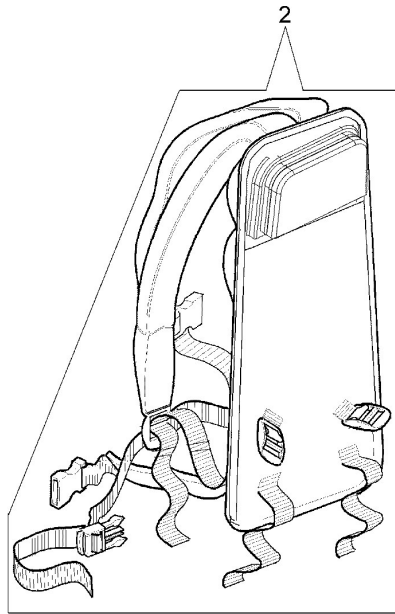


Illustration Frame - Accessories

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	62022030	Buckle set				
2	1	61250173R	Harness				
3	1	62040021R	Frame				
4	1	3910024R	Screw				
5	1	62040024R	Plate				
6	4	3819006R	Washer				
7	4	3801013R	Screw				
8	1	62040023AR	Support				
9	1	62030020R	Spacer				
10	4	58040079AR	Spring				
11	1	62030067R	Hub				
12	6	3801011R	Screw				
13	6	3918005R	Washer				
14	1	61390009R	Fixing plate				
15	6	3918006	Washer				
16	6	3914003R	Nut				
17	1	61012010	Tool kit				
18	1	61330203	Labels kit				
19	1	61280332	Guard				
20	2	3960040R	Screw				
21	1	4174278R	Plate				
22	1	3802004DR	Screw				
23	1	4179113AR	Skirt w/blade				
24	1	4174275R	Blade				

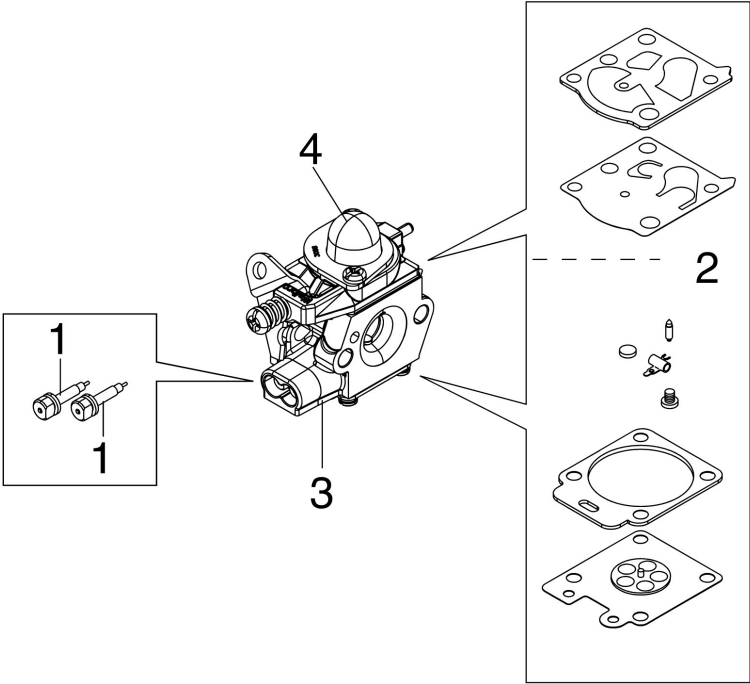


Illustration Carburetor WT-1099

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	2	2318667R	Adjust. screw				
2	1	2318671	Repair kit				
3	1	2318987R	Carburetor WT-1099				
4	1	2318572	Primer pump				

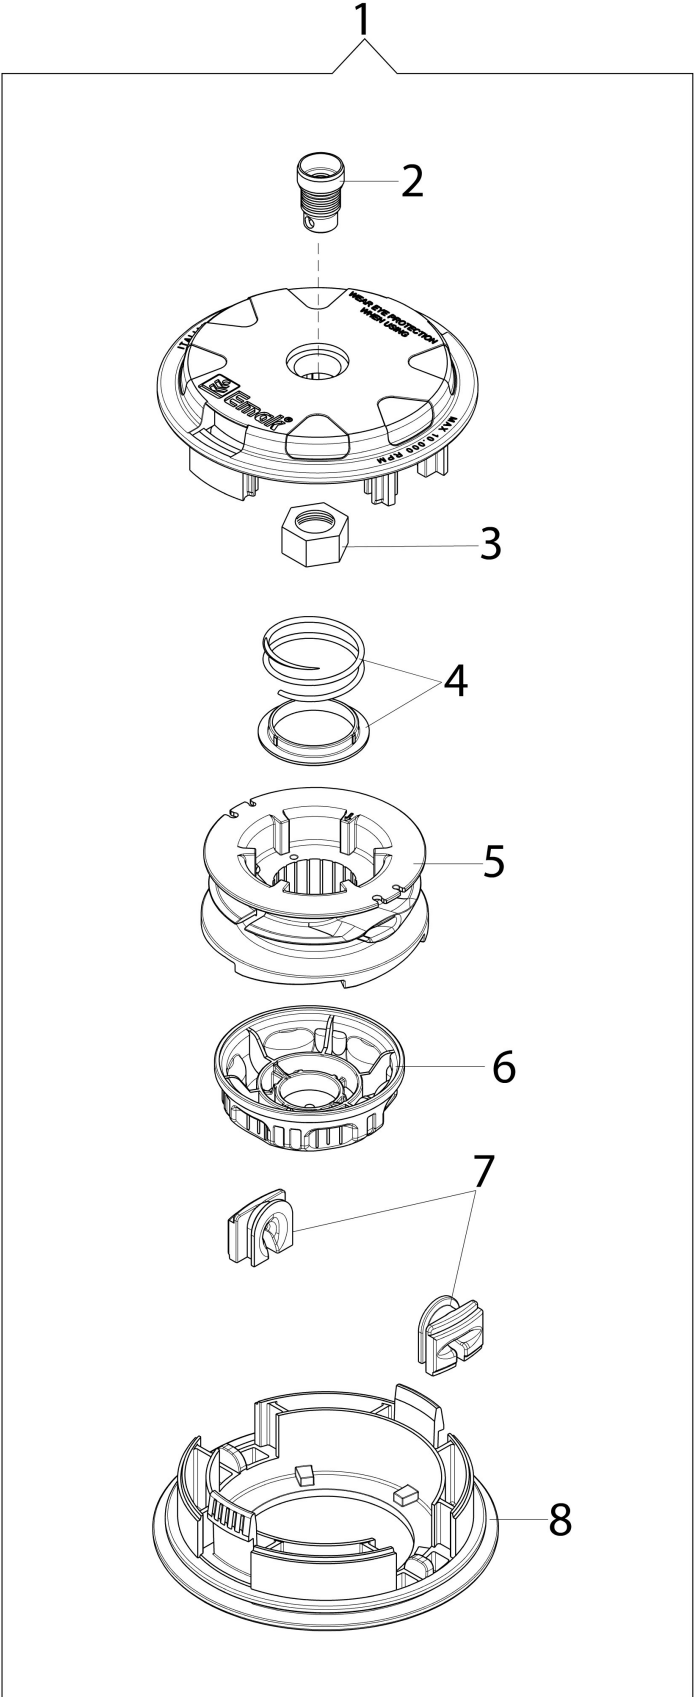


Illustration Illustrated parts list (Head "Load and Go" Ø130)

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	63129015	Head Load&Go			ExtraLife	
1	1	63129008	Head Load&Go			Easy&LongLife	
2	1	63120041R	Insert				
3	1	63120040R	Nut				
4	1	63120031R	Kit spring				
5	1	63120020AR	Ignition coil				
6	1	63120030AR	Knob			ExtraLife	
6	1	63120007AR	Knob			Easy&LongLife	
7	2	63120001R	Bushing				
8	1	63120005R	Cover				