


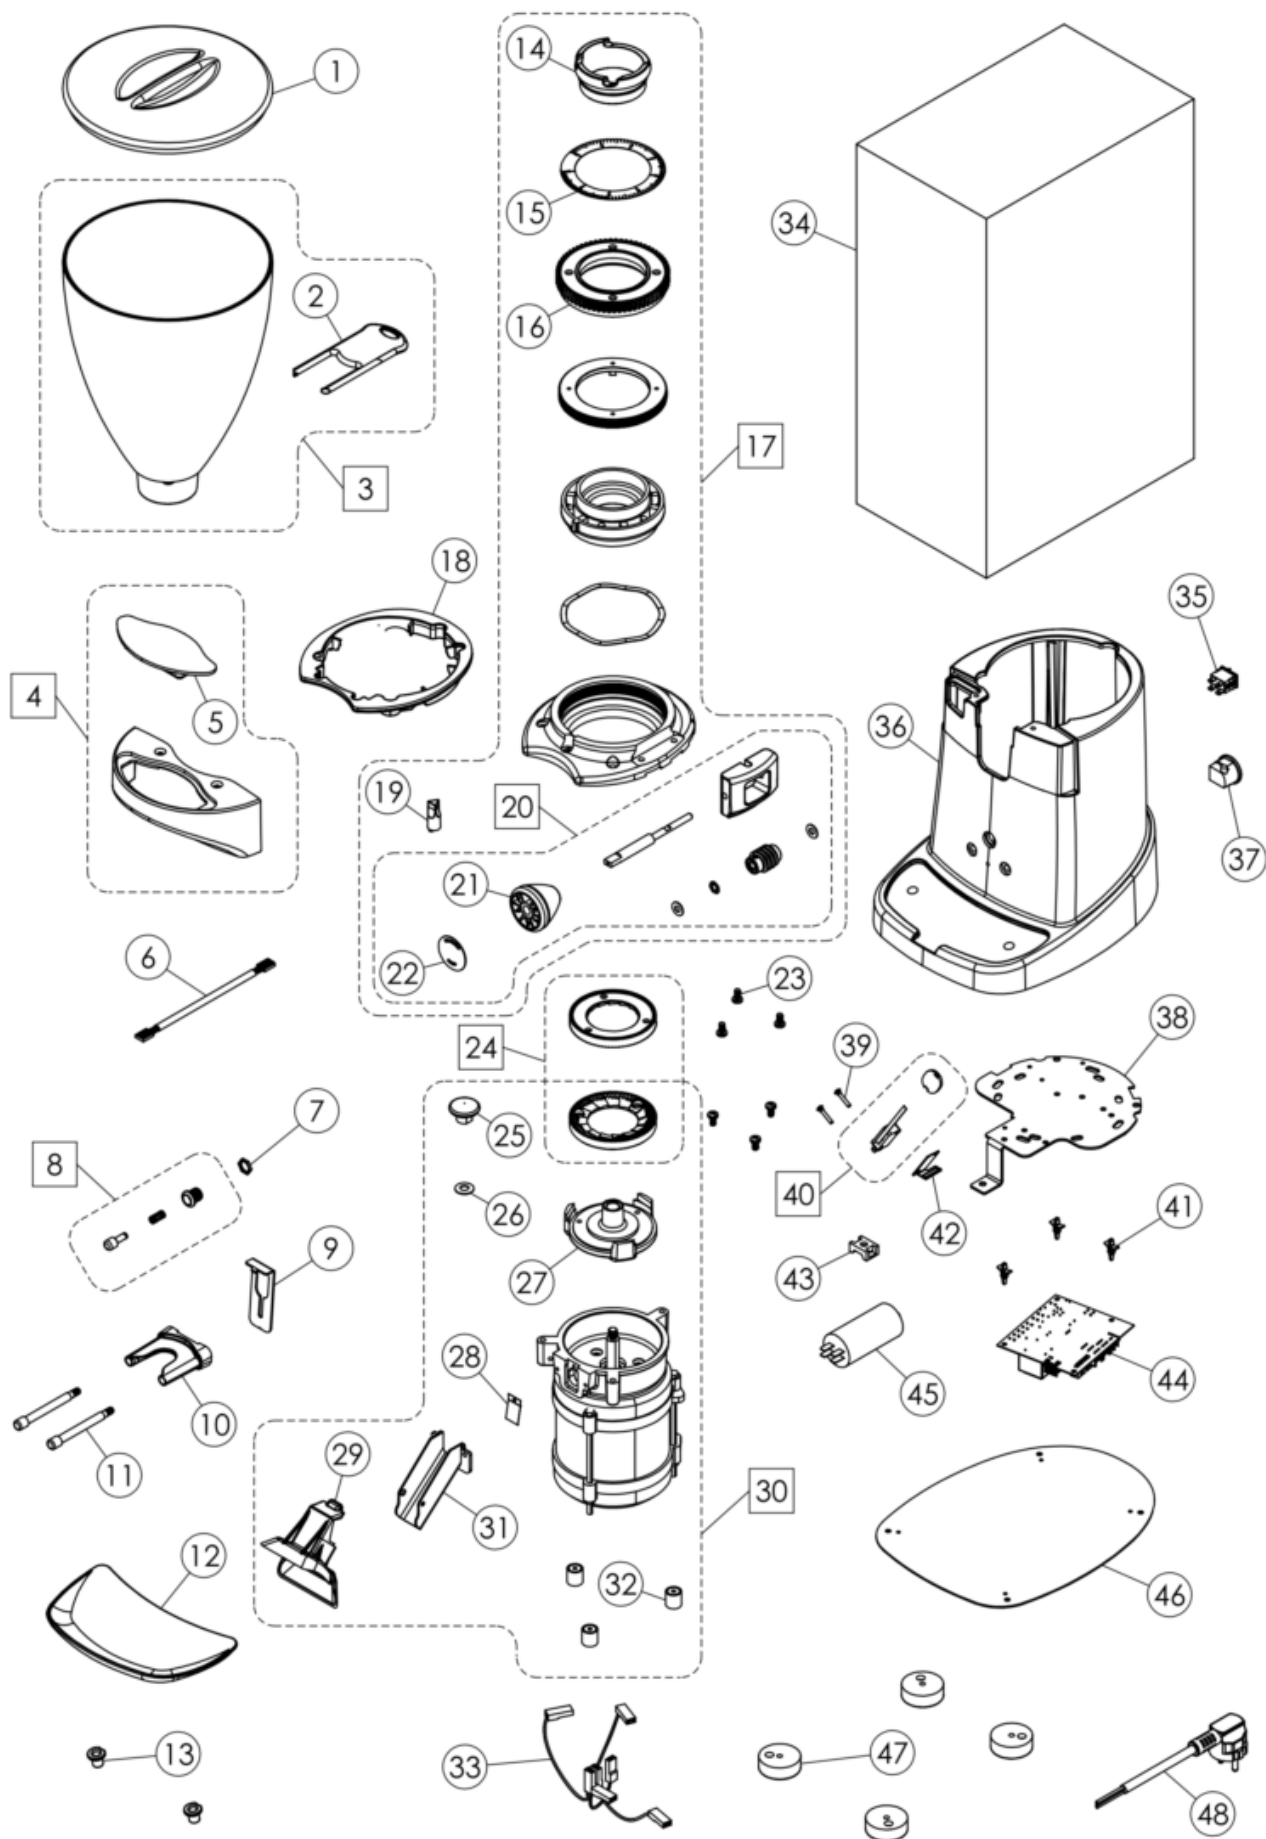

Pos	Code	Description
0001	70146	BIG HOPPER LID
0002	70145	HOPPER SHUTTER
0003	90166	BIG HOPPER WITH SHUTTER
0004	90325	DISPLAY SUPPORT
0005	50271	TOUCH SCREEN
0006	50276	SERIAL CONNECTOR
0007	45323	NUT
0008	90180	SWITCH ASSEMBLY
0009	20365	BRACKET
0010	75548	FILTER-HOLDER REST
0011	40246	PIN
0012	70163	TRAY
0013	70173	RUBBER PEG
0014	70245	HOPPER SUPPORT
0015	85175	GRADUATED DISK
0016	70239	GRIND ADJUSTMENT DISK
0017	90342	QUICK SET GEAR ASSEMBLY
0018	75530	GASKET
0019	90399	INDICATOR
0020	90376	ADJUSTMENT ASSEMBLY
0021	70240	KNOB
0022	85130	SERIGRAPHY
0023	912087	SCREW
0024	90303	BURRS
0025	40319	NUT
0026	746822	WASHER
0027	10471	DRIVE HUB
0028	45516	FLAP
0029	70165	SPOUT RUBBER ELEMENT
0030	90205	MOTOR ASSEMBLY
0031	20387	SPOUT
0032	75158	BUFFER
0033	50336	WIRING
0034	80128	BOX
0035	50108	SWITCH
0036	10485	GRINDER BODY
0037	50161	CORD CLAMP
0038	20334	BRACKET
0039	75205	PIN
0040	90457	MICROSWITCH
0041	75146	PIN
0042	20332	BRACKET
0043	75164	SUPPORT
0044	50286	ELECTRONIC BOARD
0045	50192	CAPACITOR
0046	20333	PLATE
0047	70138	FOOT
0048	50213	CORD