


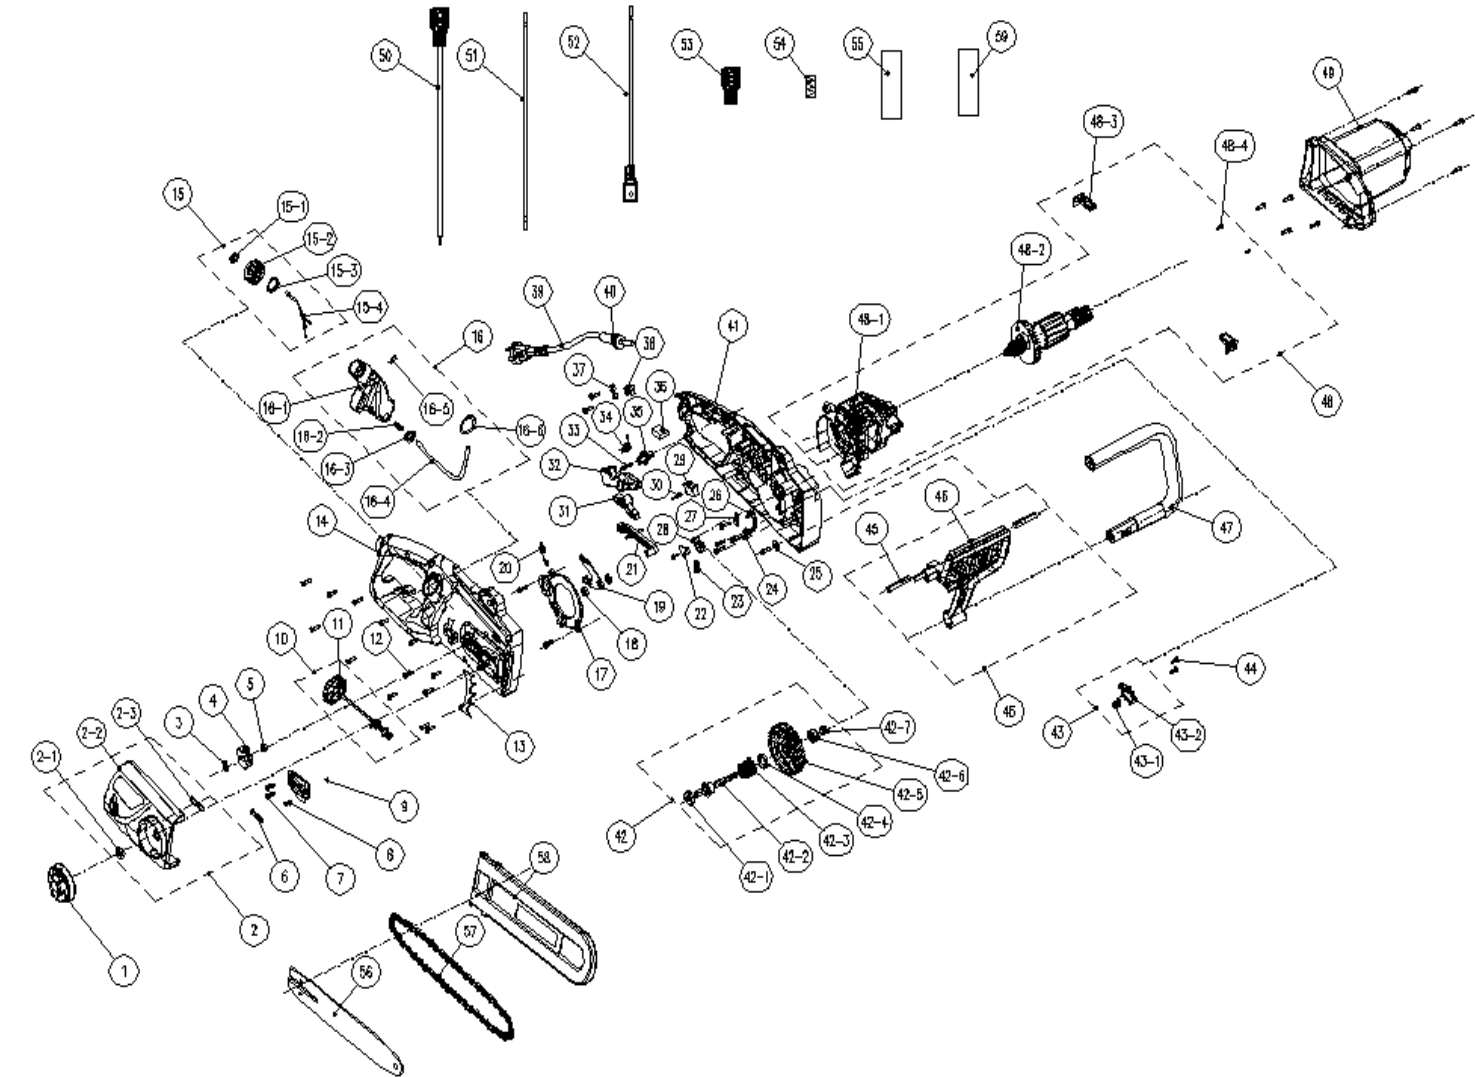

№	Артикул	Наименование	Кол-во
1	8313-438801EVO	Bar Adjustment Locking Knob	1
2	8440-439501EVO	Cover Assembly	1
2-1	8334-463101EVO	Axle Bushing	1
2-2	8021-439501EVO	Cover	1
2-3	8208-438801EVO	Sealing Ring	1
3	8CE-07BEVO	Retaining Ring	1
4	8128-462202EVO	Sprocket	1
5	8342-462304EVO	Spring	1
6	8208-438301EVO	Sealing Ring	1
7	8SNAB29-12DEVO	Self-tapping Screw	2
8	8SJAB40-16EVO	Self-tapping Screw	29
9	8202-438801EVO	Insulation Gasket	1
10	8440-491105EVO	Adjusting Rod Assembly	1
11	8313-436501EVO	knob	1
12	8SJAB40-30DEVO	Self-tapping Screw	2
13	8181-481601EVO	Buffer Board	1
14	8006-439502EVO	Right Housing	1
15	8440-438408EVO	Oil Tank Cap Assembly	1
15-1	8024-432101EVO	Oil Tank Cap Cover	1
15-2	8020-431701EVO	Oil Tank Cap	1
15-3	8208-431901EVO	Sealing Ring	1
15-4	8088-438401EVO	Hook	1
16	8440-439504EVO	Oil Tank Assembly	1
16-1	8165-439501EVO	Oil Tank	1
16-2	8342-437501EVO	Spring	1
16-3	8208-462503EVO	Sealing Ring	1
16-4	234-1003EVO	Translucent Oil Tube	0.19m
16-5	8335-481201EVO	Valve	1
16-6	8341-491801EVO	Rubber Cushion	1
17	8024-438401EVO	Dust Cover	1
18	8334-439501EVO	Axle Bushing	2
19	8321-439501EVO	Braking Pad	1
20	8342-435302EVO	Brake spring	1
21	8087-438401EVO	Switch Link Rod	1
22	8182-471902EVO	Pressboard	1
23	8342-481501EVO	Spring	1
24	8440-467608EVO	Oil Nozzle Set	1
25	8202-462203EVO	Brake washer	1
26	234-1003EVO	Translucent Oil Tube	0.07m
27	8182-439501EVO	Pressboard	1
28	8304-438401EVO	Positioning Block	1
29	8042-481603EVO	Micro Switch	1
30	8SJAB30-16DEVO	Self-tapping Screw	1
31	8087-438402EVO	Intermediate Link Rod	1
32	8312-439401EVO	Switch Button	1
33	A013025-031EVO	Switch Torsion Spring	1
34	8342-440302EVO	double Torsion Spring	1
35	8312-433501EVO	Anti-self-locking Button	1
36	8416-000006EVO	Two-pin Capacitor	1
37	8184-282102EVO	Cord Pressboard	1
38	8411-522201EVO	Terminal Set	2
39	8422-431701EVO	Power Cord & Plug	1
40	8332-491901EVO	Cable Sheath	1
41	8006-439501EVO	Left Housing	1
42	8440-439502EVO	Output Shaft Assembly	1
42-1	8BC-221006-STEVO	6900 Bearing	1
42-2	8085-434501EVO	Output Shaft	1
42-3	8342-435301EVO	Brake Torsion Spring	1
42-4	8063-462201EVO	Axle Bushing	1
42-5	8123-471301EVO	Output Shaft Gear	1
42-6	8BC-220807-STEVO	608Z Bearing	1
42-7	8NH-08DEVO	Hexagon Lock Nut	1
43	8440-435325EVO	Oil Pump Assembly	1
43-1	8342-491201EVO	Oil Pump Extension Spring	1
43-2	8440-481614EVO	Oil Pump	1
44	8SNAB29-12EVO	Self-tapping Screw	2
45	8302-439501EVO	Adding Weight Piece	2
46	8185-439501EVO	Front Hand Guard	1
47	8003-439501EVO	Front Handle	1
48	8440-439505EVO	Motor Assembly	1
48-1	8440-439517EVO	Stator Assembly	1
48-2	8440-439518EVO	Rotor Assembly	1
48-3	8440-438407EVO	Brush holder Assembly	1
48-4	8SJAB25-08DEVO	Self-tapping Screw	2
49	8004-439501EVO	Motor Rear Bracket	1
50	8413-433401EVO	Connection Wire	1
51	8413-690902EVO	Connection Wire	1
52	8413-467402EVO	Connection Wire	2
53	239-0011EVO	Female Terminal	3
54	239-0044EVO	Copper Tape	24mm
55	233-1006EVO	Heat Shrink Tube	0.15m
56	243-0168EVO	Guide Bar	1
57	243-0102EVO	Saw Chain	1
58	8331-462101EVO	Bar Sheath	1
59	233-1004EVO	Heat Shrink Tube	0.12m