 


KitchenAid

Food Processor
5KFP1319*



 
PARTS AND FEATURES

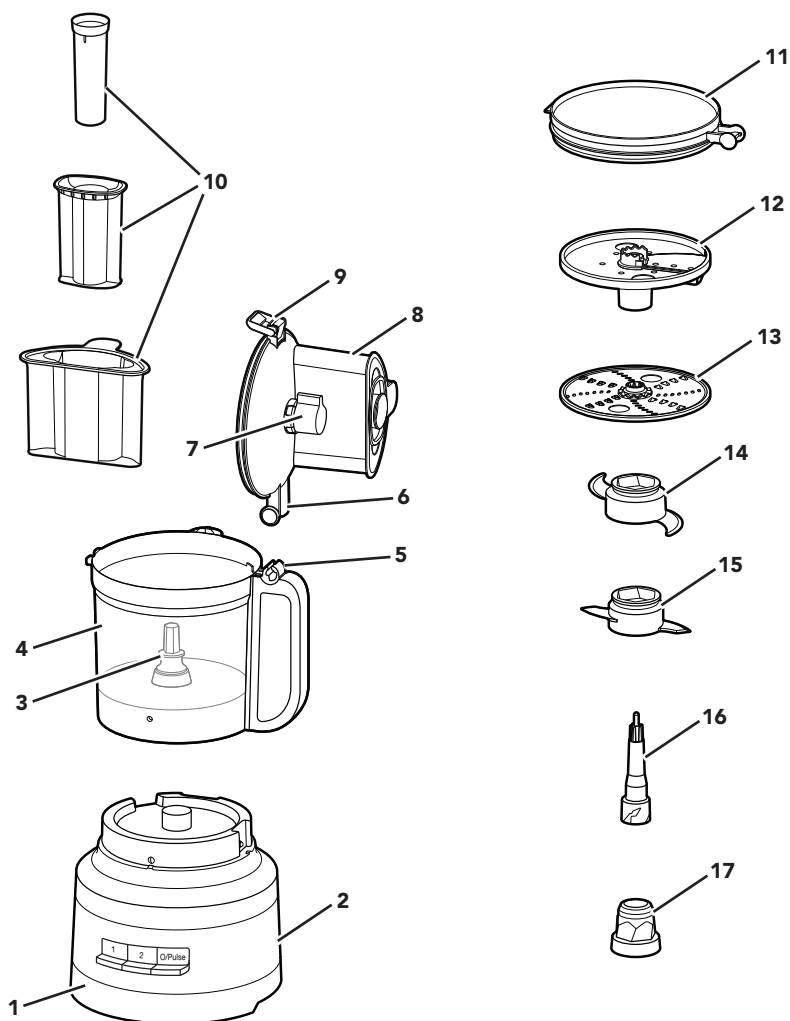

- 1** Heavy-Duty Base
- 2** Power Cord and Cord Storage (not shown)
- 3** Drive Pin
- 4** 13-Cup (3.1 L) Work Bowl
- 5** Handle Hinge
- 6** Lid Hinge
- 7** Slicing Knob
- 8** Work Bowl Cover with 3-in-1 Feed Tube
- 9** Lid Latch

- 10** 3-in-1 Food Pusher
- 11** Refrigerator Lid
- 12** Externally Adjustable Slicing Disc (thin to thick)
- 13** Reversible Fine/Medium Shredding Disc
- 14** Multipurpose Stainless Steel Blade
- 15** Dough Blade
- 16** Drive Adapter (Upper)
- 17** Drive Adapter (Lower)

PARTS AND FEATURES

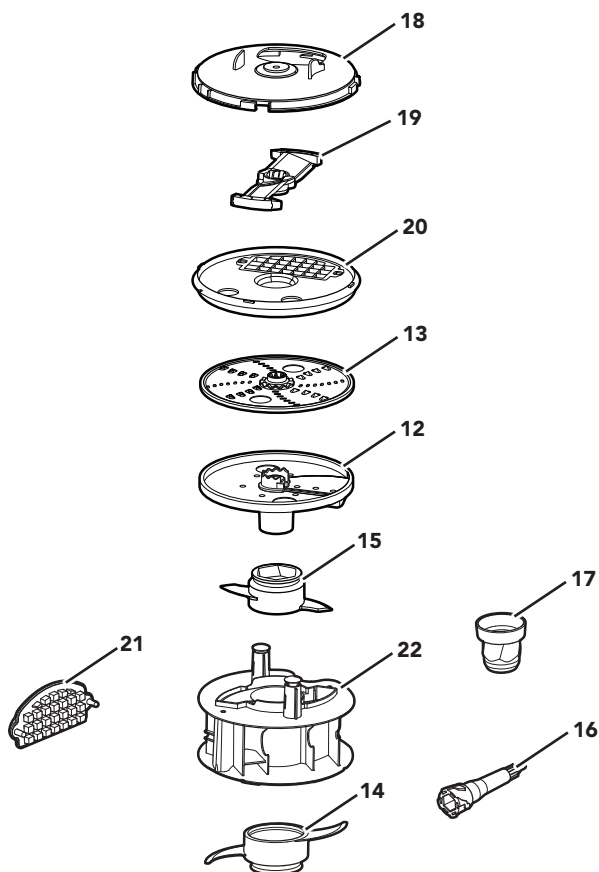

18 Dicing Kit Cover

19 Dicing Blade

20 Dicing Kit Base

21 Dicing Kit Clean Out Tool

22 Storage Caddy

PRODUCT SAFETY

Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word “DANGER” or “WARNING.” These words mean:

! DANGER

You can be killed or seriously injured if you don't immediately follow instructions.

! WARNING

You can be killed or seriously injured if you don't follow instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions. Misuse of appliance may result in personal injury.
2. To protect against risk of electrical shock, do not put Food Processor in water or other liquid.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with appliance.
4. Turn the appliance OFF, then unplug from the outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the Power Cord.
5. Avoid contacting moving parts.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest Authorised Service Centre for examination, repair or adjustment.
7. The use of attachments not recommended or sold by KitchenAid may cause fire, electric shock, or injury.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter.
10. Keep hands and utensils away from moving Blades or discs while processing food to reduce the risk of severe injury to persons or damage to the Food Processor. A scraper may be used but must be used only when the Food Processor is not running.

PRODUCT SAFETY

11. Blades are sharp. Handle Carefully. Care should be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.
12. To reduce the risk of injury, never place cutting Blade or discs on Base without first putting Bowl properly in place.
13. Be certain Cover is securely locked in place before operating the Food Processor.
14. Never feed food by hand. Always use the Food Pusher.
15. Do not attempt to defeat the Cover interlock mechanism.
16. Do not fill the Bowl above the marked maximum fill line to avoid risk of injury due to damage to the Cover or Bowl.
17. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
18. Be careful if hot liquid is poured into the Food Processor as it can be ejected out of the appliance due to a sudden steaming.
19. Refer to the "Care and Cleaning" section for instructions on cleaning the surfaces in contact with food.
20. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farmhouses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.

SAVE THESE INSTRUCTIONS

Instructions are also available online, visit our website at:

www.KitchenAid.com.au

ELECTRICAL REQUIREMENTS

Voltage: 220-240 V~

Frequency: 50-60 Hz

NOTE: If the plug does not fit in the outlet, contact a qualified electrician. Do not modify the plug in any way. Do not use an adapter.

Do not use an extension cord. If the power supply cord is too short, have a qualified electrician or service technician to install an outlet near the appliance.

ACCESSORIES SELECTION GUIDE

Action	Setting	Food	Accessory
Chop	1 or Pulse	Cheese*	Multipurpose Stainless Steel Blade
		Chocolate*	
		Fruits	
Mince or Purée	2 or Pulse	Fresh herbs	Multipurpose Stainless Steel Blade
		Nuts*	
		Tofu	
Mix	1	Vegetables	Multipurpose Stainless Steel Blade
		Beef***	
		Pasta Sauce	
		Pesto	Externally Adjustable Slicing Disc
		Salsa	
		Sauces	
		Batters	Externally Adjustable Slicing Disc
		Fruit (soft)	
		Potatoes	
		Tomatoes	Externally Adjustable Slicing Disc
		Vegetables (soft)	
		Cheese	
		Fruit (hard)	Externally Adjustable Slicing Disc
		Vegetables (hard)	
		Potatoes	Reversible Fine/Medium Shredding Disc
		Vegetables (soft)	
		Cabbage	
		Cheese	Reversible Fine/Medium Shredding Disc
		Chocolate	
		Fruits (hard)	
		Vegetables (hard)	Dicing Kit
		Potatoes	
		Vegetables	
		Fruit	Dicing Kit
		Cheese	
		Yeast**	Dough Blade
		Dough**	

NOTE: Do not operate the appliance exceeding a maximum of 3 minutes. After 3 minutes the appliance needs to cool down to avoid overheating.

*For these ingredients it is not recommended to process quantities larger than 500 g (1/4 of Work Bowl) with the Multipurpose Stainless Steel Blade.

**For these ingredients it is not recommended to process quantities larger than 384 g.

 
***Do not process more than 225 g, chop beef into 1 cm cubes prior to adding to Bowl.

PRODUCT ASSEMBLY


Before first use

Before using your Food Processor for the first time, wash all parts and accessories either by hand or in the dishwasher (see "Care and Cleaning" section).

NOTE: Your Food Processor is designed so that all accessories may be stored inside the Work Bowl.

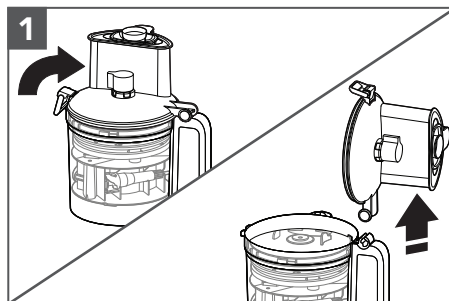


 Lift up the Lid Latch to unlock the Cover. Tilt the Work Bowl Cover back and lift it straight up so that the Lid Hinge pulls out of the Handle Hinge.

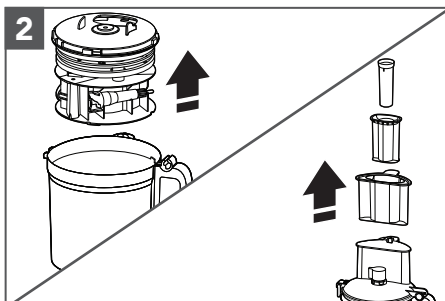


Remove all parts and accessories from the Work Bowl, and lift the Food Pusher out of the Feed Tube.

 IMPORTANT: Place the Food Processor on a dry, level countertop with the controls facing forward. Do not plug in the Food Processor until it is completely assembled.

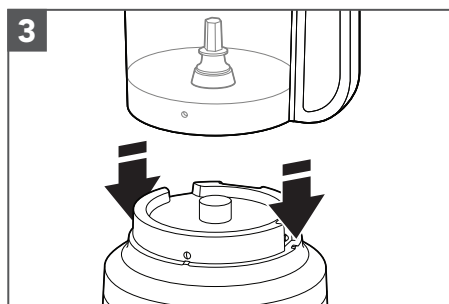


 
Place the Work Bowl on the Base, aligning the Handle with the raised button on the right side of the Base. The Bowl will click into place and should be flush against the Base when properly aligned.

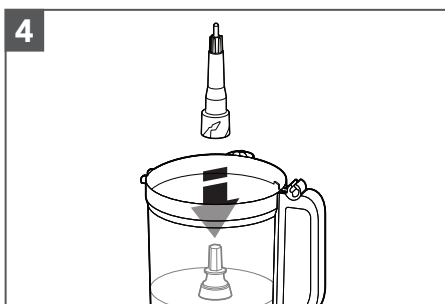

Place the Drive Adapter in the Work Bowl, lowering it onto the Drive Pin.



PRODUCT ASSEMBLY

  NOTE: For ease of assembly, install the desired Blade or Disc before attaching the Work Bowl Cover.

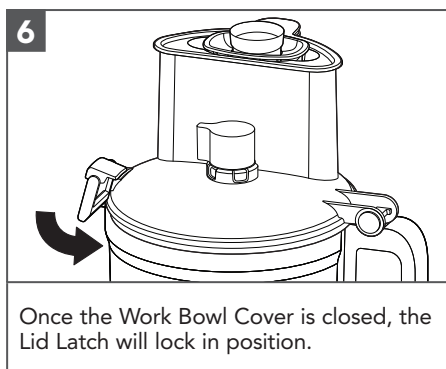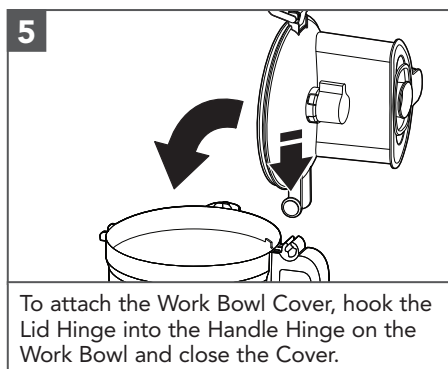



NOTE: Your Food Processor will not operate unless the Work Bowl Cover is fully closed, the large Food Pusher is in place, and the Work Bowl is properly seated on the Base.

  INSTALLING THE MULTIPURPOSE BLADE OR DOUGH BLADE

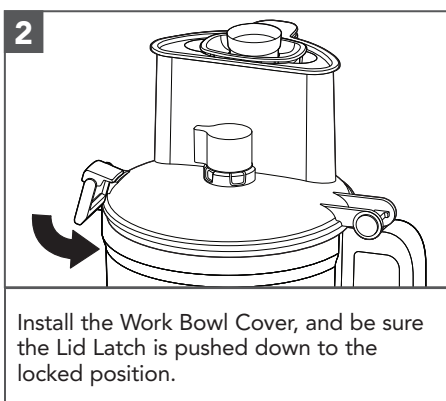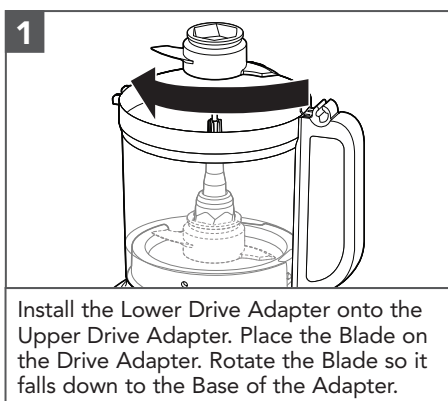


PRODUCT ASSEMBLY

  INSTALLING THE EXTERNALLY ADJUSTABLE SLICING DISC

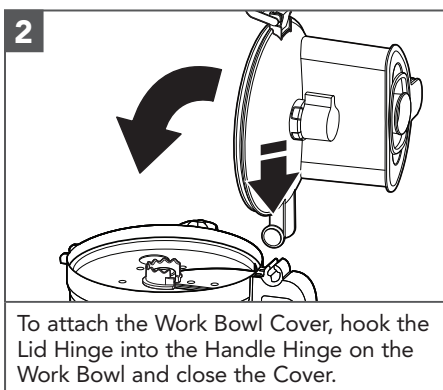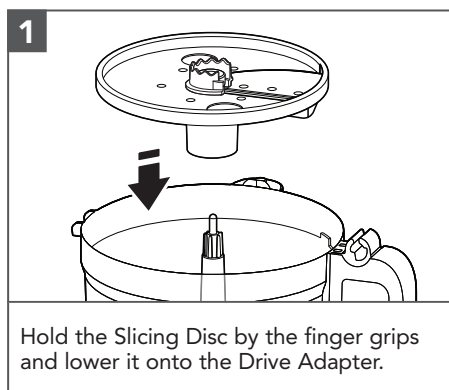


 TIP: You may need to adjust the Drive Adapter with a slight turn on the power shaft until it drops into place. For easiest installation, make sure the Adjustment Knob is in the "0" position.

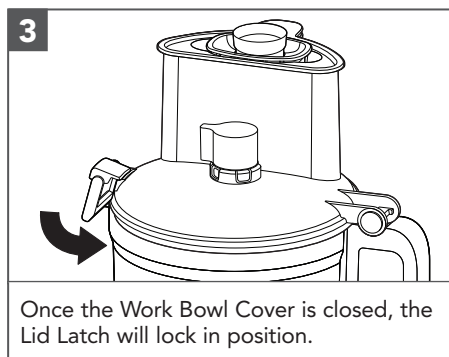

NOTE: Your Food Processor will not operate unless the Work Bowl Cover is fully closed and the Work Bowl is properly seated on the Base.




 
ADJUSTING THE SLICING THICKNESS

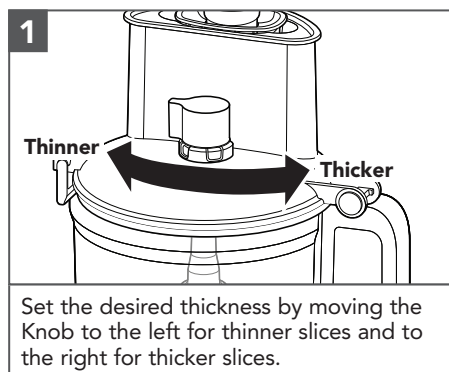

NOTE: The Knob only works with the Externally Adjustable Slicing Disc. Changing thickness settings with other discs or Blades installed will have no effect on operation.

PRODUCT ASSEMBLY

    INSTALLING THE DICING KIT

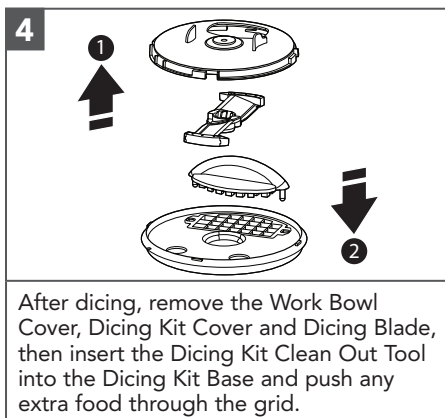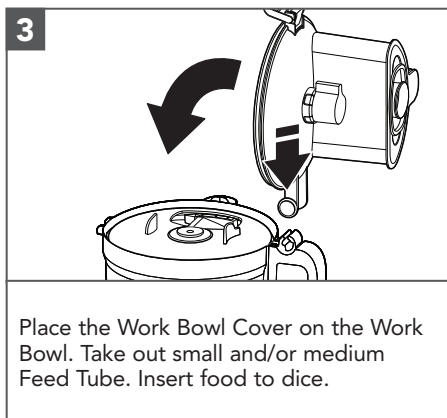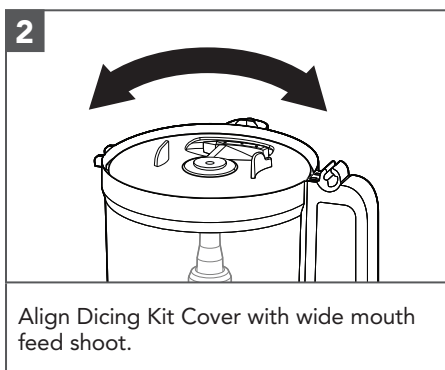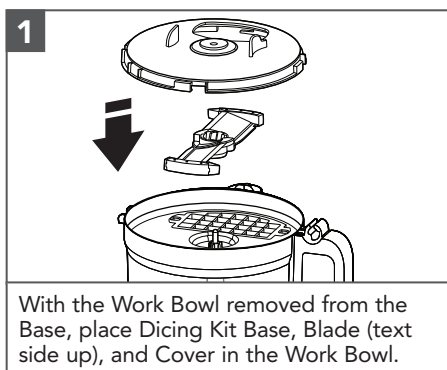

PRODUCT USAGE

⚠ WARNING



Rotating Blade Hazard

Always use food pusher.

 
Keep fingers out of openings.

Keep away from children.

Failure to do so can result in amputation or cuts.


Before operating the Food Processor, be sure the Work Bowl, Blades/Disc, and Work Bowl Cover are properly assembled on the Base (see the "Product Assembly" section).

PRODUCT USAGE

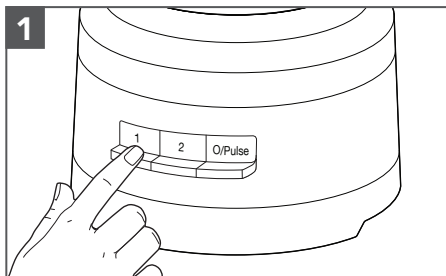


To turn on, press 1 or 2. The Food Processor will run continuously and the indicator light will glow.

 To turn off, press 1 or 2 again, or press O/Pulse.

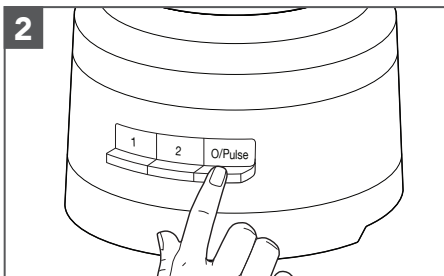


To use the Pulse function:

 Press O/Pulse for short bursts, or press and hold for longer bursts. The Pulse function runs at speed 2 only. The Food Processor will turn off when the O/Pulse button is released.

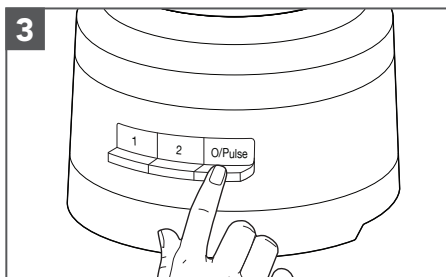

 When finished, press the O/Pulse button. The indicator light will go out and the Blade or Disc will slow to a stop.

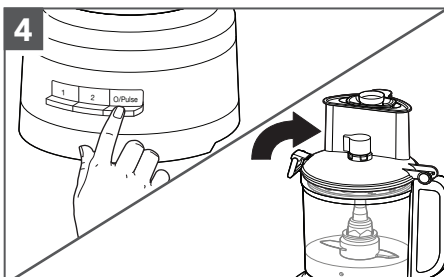

Wait until the Blade or disc comes to a complete stop before removing the Work Bowl Cover. Be sure to turn off the Food Processor before removing the Work Bowl Cover, or before unplugging the Food Processor.

USING THE 3-IN-1 FEED TUBE

The 3-in-1 Feed Tube features a 3-piece Food Pusher.

 
Use the entire Feed Tube and the large Food Pusher to process large items.

NOTE: The unit will not start if food is loaded in the large Feed Tube above the max fill line.

Use the medium Food Pusher in the Feed Tube to process smaller items.


Use the small Food Pusher to slice or shred the smallest, thinnest items.

Use the drizzle hole in the small Food Pusher to slowly drizzle oil or other liquid ingredients into the Work Bowl.

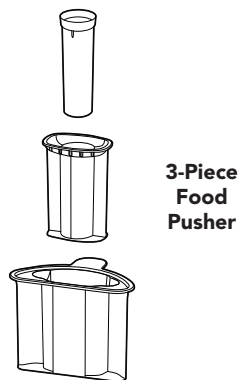


PRODUCT DISASSEMBLY

 
REMOVING PROCESSED FOODS

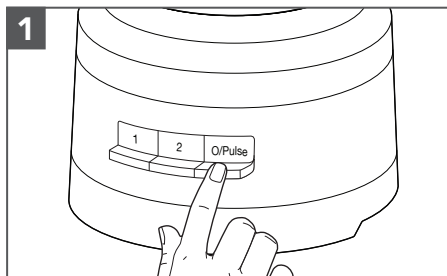

 
Turn the Food Processor off: Press the O/Pulse button and unplug the Food Processor before disassembling.

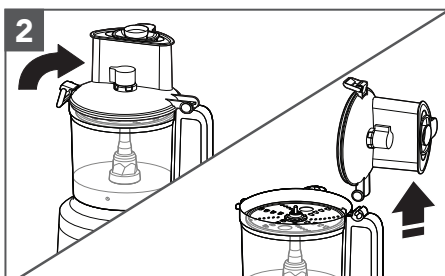

 
Lift the Lid Latch to unlock the Work Bowl Cover, then lift the Cover to remove.

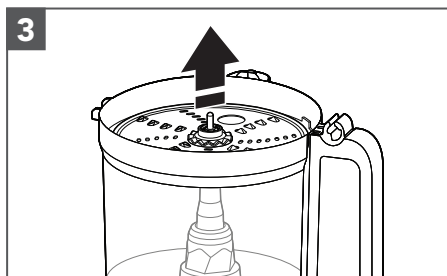

 If using the disc, remove it before removing the Bowl. Holding the disc by the finger holes, lift it straight up.

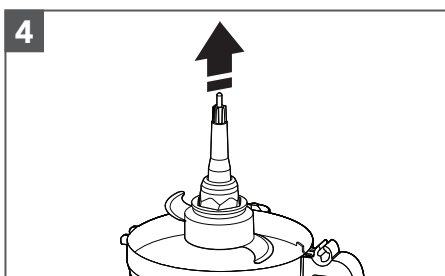

 Remove the Drive Adapter and Multipurpose Blade, if using. The Blade will stay in place on the Drive Adapter when you remove the Adapter.

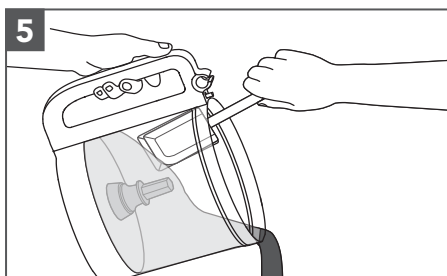


Lift the Work Bowl off of the Base to remove food from the Bowl with a spatula.

CARE AND CLEANING


IMPORTANT: The BPA-free Bowl requires special handling. If you choose to use a dishwasher instead of hand washing, please follow these guidelines.

 1

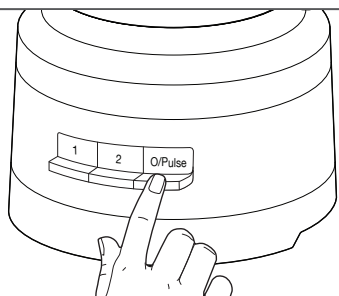


Press the O/Pulse button, then unplug the Food Processor before cleaning.

 2

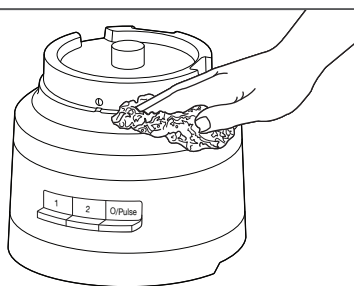


Wipe the Base and cord with a warm, damp cloth. Thoroughly dry with a soft cloth. Do not use abrasive cleaners or scouring pads. Do not immerse Base in water or other liquid.

 3

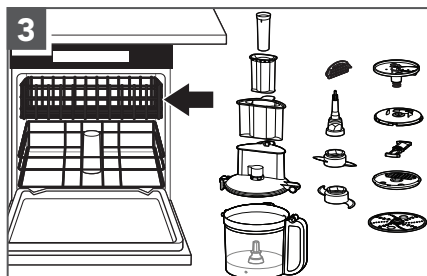

All parts are top rack dishwasher safe. Avoid laying the Bowl on its side. Thoroughly dry all parts after washing. Use gentle dishwashing cycles such as normal. Avoid high-temperature cycles.

 4

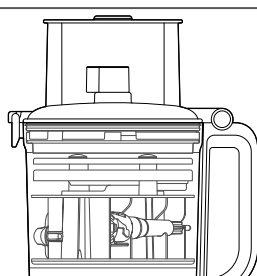

You can store up to two Blades and three discs as well as the Drive Adapter inside the Work Bowl by using the in bowl Storage Caddy when the Food Processor is not in use. Wrap the Power Cord around the Cord Storage on the bottom of the Base, then secure the plug by clipping it to the housing.

NOTE: If washing the Food Processor parts by hand, avoid the use of abrasive cleansers or scouring pads. They may scratch or cloud the Work Bowl and Cover.

TROUBLESHOOTING GUIDE

Problem	Solution
If your Food Processor should malfunction or fail to operate, check the following:	Check to see if the Food Processor is securely plugged into an earthed outlet.
	Make sure that the Bowl and Lid are properly aligned and locked in place.
	Have you pressed more than one button at the same time?
	Unplug the Food Processor, then plug it back into the outlet.
Is the fuse in the circuit to the Food Processor in working order?	If you have a circuit breaker box, be sure the circuit is closed.
The Food Processor may need to cool to room temperature:	If the speed light turns off and the O/Pulse light flashes, wait until the O/Pulse light turns off and retry. The Food Processor may take from 5-15 minutes to cool completely.
The motor may be locked:	If the speed light stays on while the O/Pulse light flashes, press the O/Pulse button to reset the motor.
Food Processor not shredding or slicing properly:	Make sure the raised-Blade side of the disc is positioned face up on the Drive Adapter.
	Make sure ingredients are suitable for slicing or shredding.
	Make sure the disc is positioned in the process position (near the top of the Bowl), and not the storage position (low and inside of the Bowl).
If the Work Bowl Cover won't close when using the disc:	Make sure the disc is installed correctly, and is positioned properly on the Drive Adapter.
If the problem cannot be corrected:	See the "Customer Service" section. Do not return the Food Processor to the retailer. Retailers do not provide service.

CUSTOMER SERVICE

In Australia:

For any questions, or to find the nearest Authorised KitchenAid Service Centre, please find our contact details below.

NOTE: All service should be handled locally by an Authorised KitchenAid Service Centre.

Toll free number: 1-800-990-990

Phone number: 02 49026500

Address Australia:

KitchenAid Australia Pty Ltd
6-8 Billbrooke Close
Cameron Park NSW 2285, Australia
Phone: 1-800-990-990
Mobile: 0249026500
Email: enquiries@kitchenaid.com.au

In New Zealand:

Website: www.kitchenaid.co.nz
Email: enquiries@kitchenaid.co.nz
Phone: 0800 881 200

In other countries:

For all product related questions and after-sales matters, please contact your dealer to obtain the name of the nearest Authorised KitchenAid Service/Customer Centre.

For more information, visit our website at:

www.KitchenAid.com.au

KitchenAid

©2021 All rights reserved.