

Иллюстрация Engine

Ссылка №	Кол-во	Код артикула	Наименование
1	1	55020084R	Muffler
2	1	3916005R	Washer
3	1	3819006R	Washer
4	1	3801013R	Screw
5	4	3801047	Screw
6	1	56550155R	Gasket
7	1	56560021AR	Deflector
8	2	012000028	Screw
9	2	3801068R	Screw
10	1	55020106R	Plate
11	1	55020054R	Muffler cover
12	2	3960142R	Screw
13	1	3801009	Screw
14	2	61050046R	Piston ring
15	1	072700045R	Piston pin
16	2	093000167	Ring
17	1	56552011A	Piston assy
18	2	074000267AR	Spacer
19	1	072700046R	Bearing
20	1	55022022R	Short block
21	2	3050022AR	Seal ring
22	2	3034009R	Bearing
23	1	4098232R	Key
24	1	55020001R	Crankshaft
25	1	61240047AR	Motor housing
26	1	55020036R	Deflector
27	1	56550143R	Net
28	1	56552012B	Complete cylinder

Иллюстрация Starter assy

27
 Kit etichette
 Labels set
 Jeu étiquettes
 Juego etiquetas
 Etikettenkit

28
 kit guarnizioni
 Gasket set
 Jeu joints
 Juego juntas
 Dichtungenkit

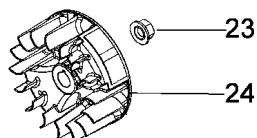
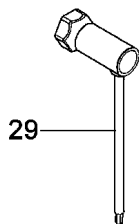
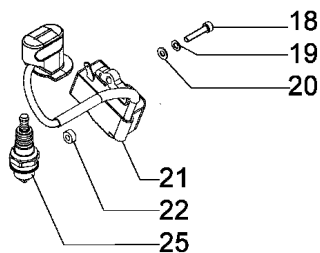
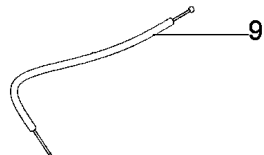
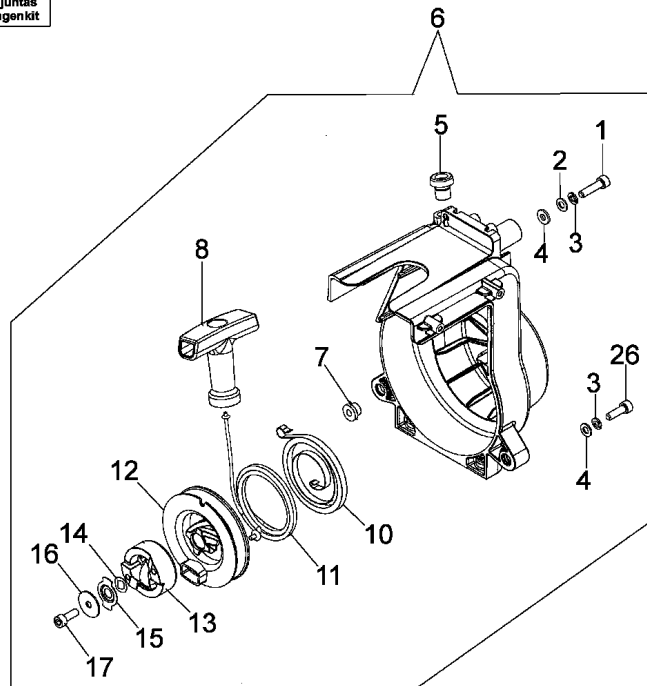


Иллюстрация Starter assy

Ссылка №	Кол-во	Код артикула	Наименование
1	1	3801013R	Screw
2	1	3916005R	Washer
3	1	3819006R	Washer
4	1	3078020R	Washer
5	1	072700089R	Bushing
6	1	55020058R	Starter assy
7	1	61240005R	Bushing
8	1	61200015R	Starter handle
9	1	55020010R	Throttle cable
10	1	004000132R	Spring
11	1	55020086R	Starter rope
12	1	56550022R	Starter pulley
13	1	56550021R	Shaft joint
14	1	3027005R	Ring
15	1	56520040AR	Plate
16	1	3918020R	Washer
17	1	3801010R	Screw
18	2	3801007	Screw
19	2	006000315R	Washer
20	2	3916004R	Washer
21	1	56550182AR	Ignition coil
22	2	61170014	Spacer
23	1	3980012	Nut
24	1	61320057AR	Flywheel
25	1	3055118	Spark plug
26	2	3801011	Screw
27	1	55022015	Labels kit
28	1	55022018	Gasket set
29	1	55020099R	Tool kit

Иллюстрация Pump assembly


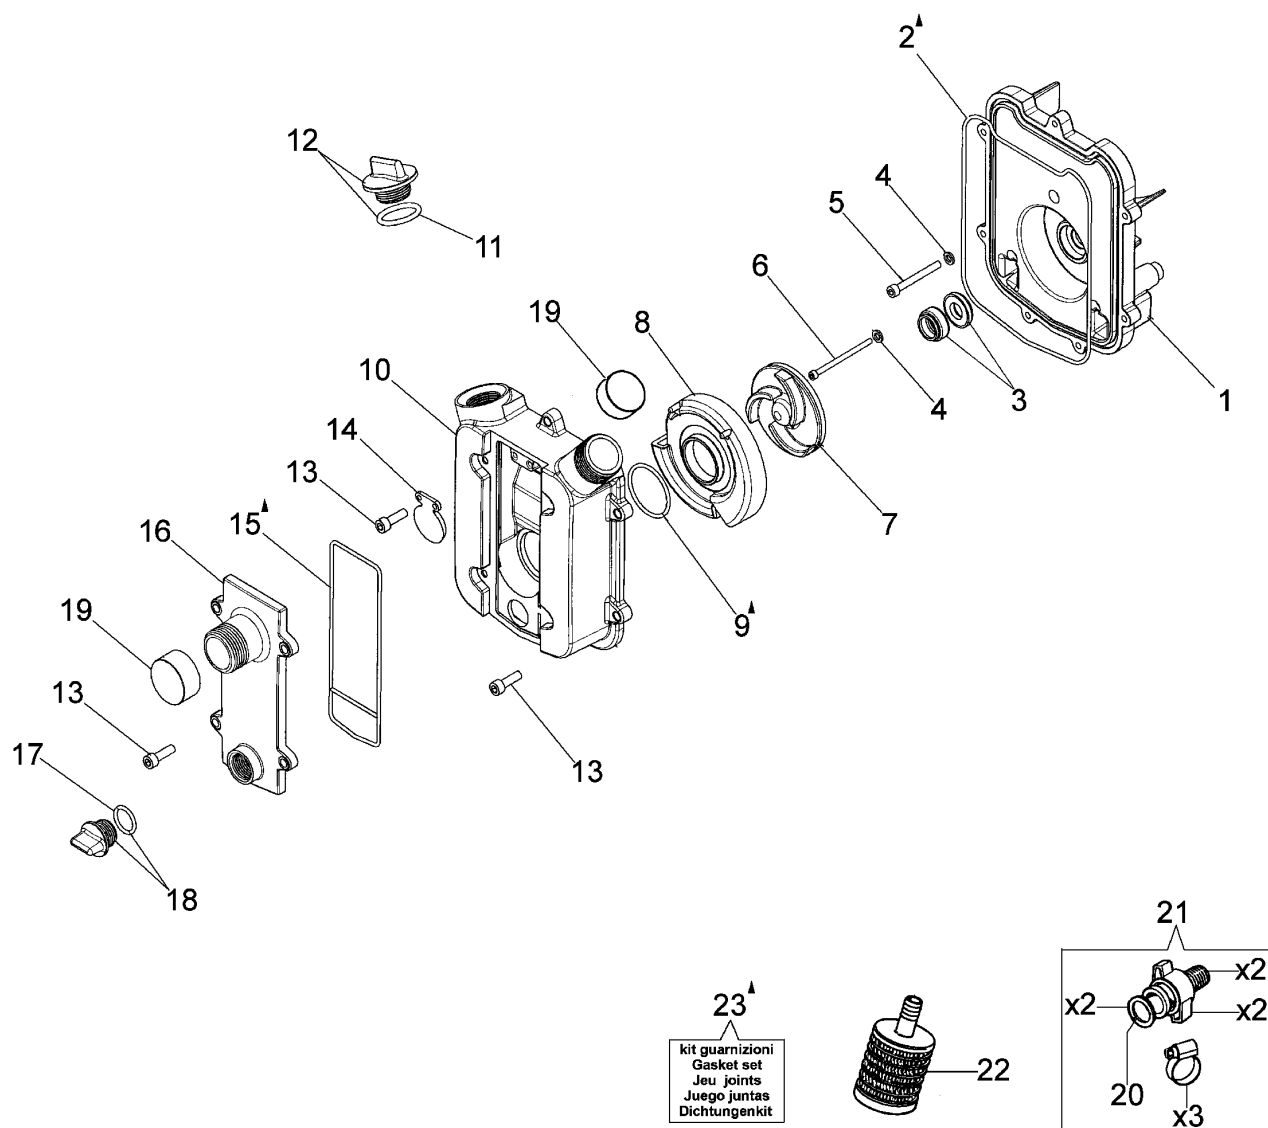


Иллюстрация Pump assembly

Ссылка №	Кол-во	Код артикула	Наименование
1	1	55020012R	Pump body
2	1	55020109R	O-ring
3	1	55022019	Mechanical seal
4	3	341000004	Washer
5	3	3901014R	Screw
6	2	3901037R	Screw
7	1	55020014R	Impeller
8	1	55020015R	Rotor case
9	1	320000005	O-ring
10	1	55020011R	Pump body
11	1	3049019	O-ring
12	1	55022020R	Complete cap
13	11	3801022R	Screw
14	1	55020018R	Valve
15	1	55020078R	O-ring
16	1	55020013R	Cover
17	1	3049018R	O-ring
18	1	55022021R	Complete cap
19	2	330000019	Guard plug
20	2	330000008R	Gasket
21	1	340000002R	Fittings kit
22	1	340000001	Filter
23	1	55022018	Gasket set

Иллюстрация Carburettor



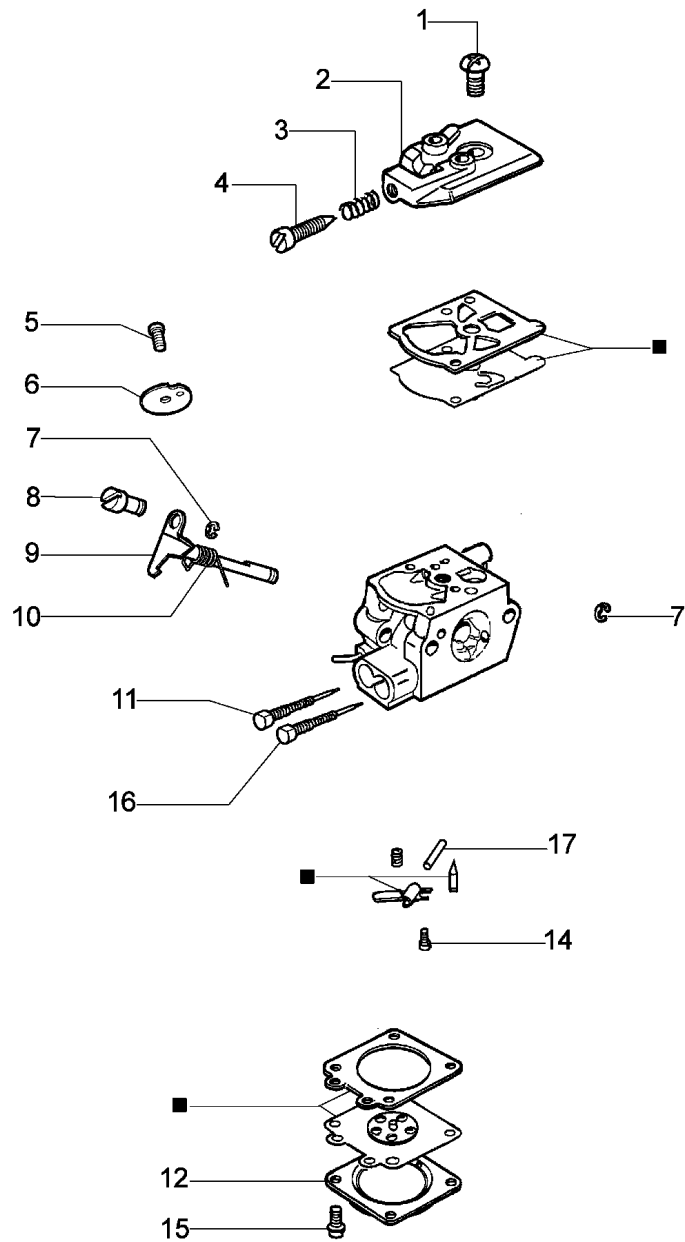


■ 13 KIT RIPARAZIONE
REPAIR KIT

Иллюстрация Carbuirettor

Ссылка №	Кол-во	Код артикула	Наименование
1	1	003300197	Screw
2	1	2318777	Cover
3	1	094600148	Spring
4	1	074000240	Adjust. screw
5	1	50010141	Screw
6	1	375100078	Shutter
7	2	095000164	Ring
8	1	2318211	Pin
9	1	2318737	Shaft
10	1	072700347	Spring
11	1	2318779	Screw L
12	1	2318191	Cover
13	1	2318671	Repair kit
14	1	003300202	Screw
15	4	035000162	Screw
16	1	2318778	Adjust. screw
17	1	003300201	Spindle

Иллюстрация Air filter and carburettor

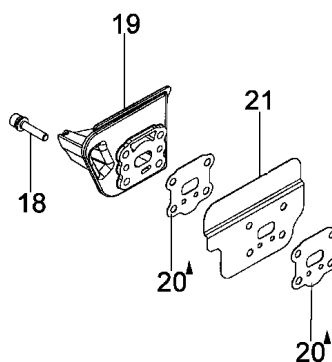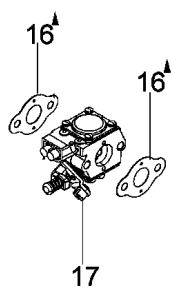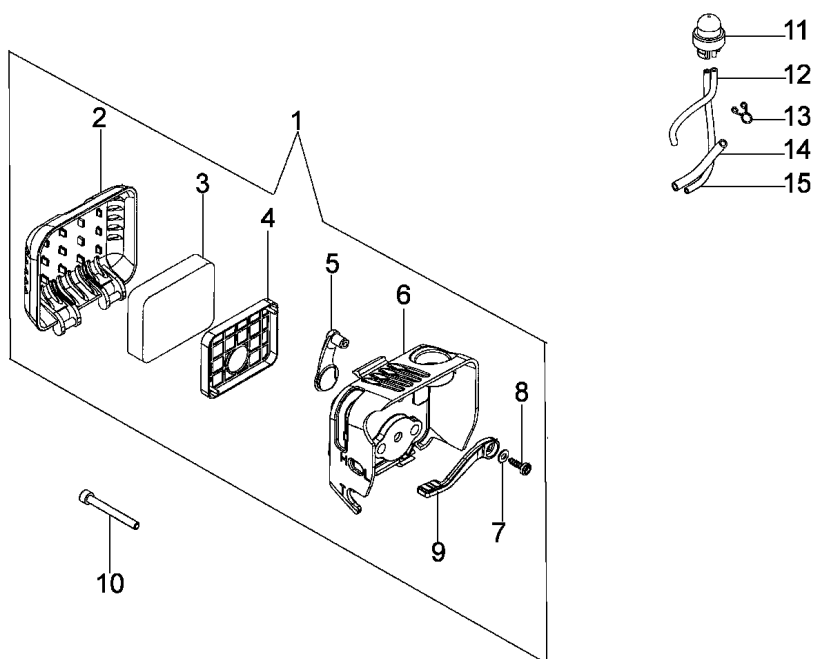

22[▲]
 kit guarnizioni
 Gasket set
 Jeu joints
 Juego juntas
 Dichtungenkit

Иллюстрация Air filter and carburettor

Ссылка №	Кол-во	Код артикула	Наименование
1	1	55020079R	Air filter kit
2	1	55020052R	Cover
3	1	55020029R	Air filter
4	1	55020028R	Guard
5	1	55020112R	Shutter
6	1	55020051R	Filter support
7	1	3916004R	Washer
8	1	3960142R	Screw
9	1	61250027R	Lever
10	2	3901014R	Screw
11	1	2318817R	Air purge
12	1	55020087R	Tube
13	1	4098377R	Band
14	1	55020089R	Tube
15	1	55020088R	Tube
16	2	61200021AR	Gasket
17	1	2318816BR	Carburetor WT-936A
18	4	3890103R	Screw
19	1	61240009DR	Insulator
20	2	56550115R	Gasket
21	1	55020048R	Gasket
22	1	55022018	Gasket set

Иллюстрация Fuel tank and handle

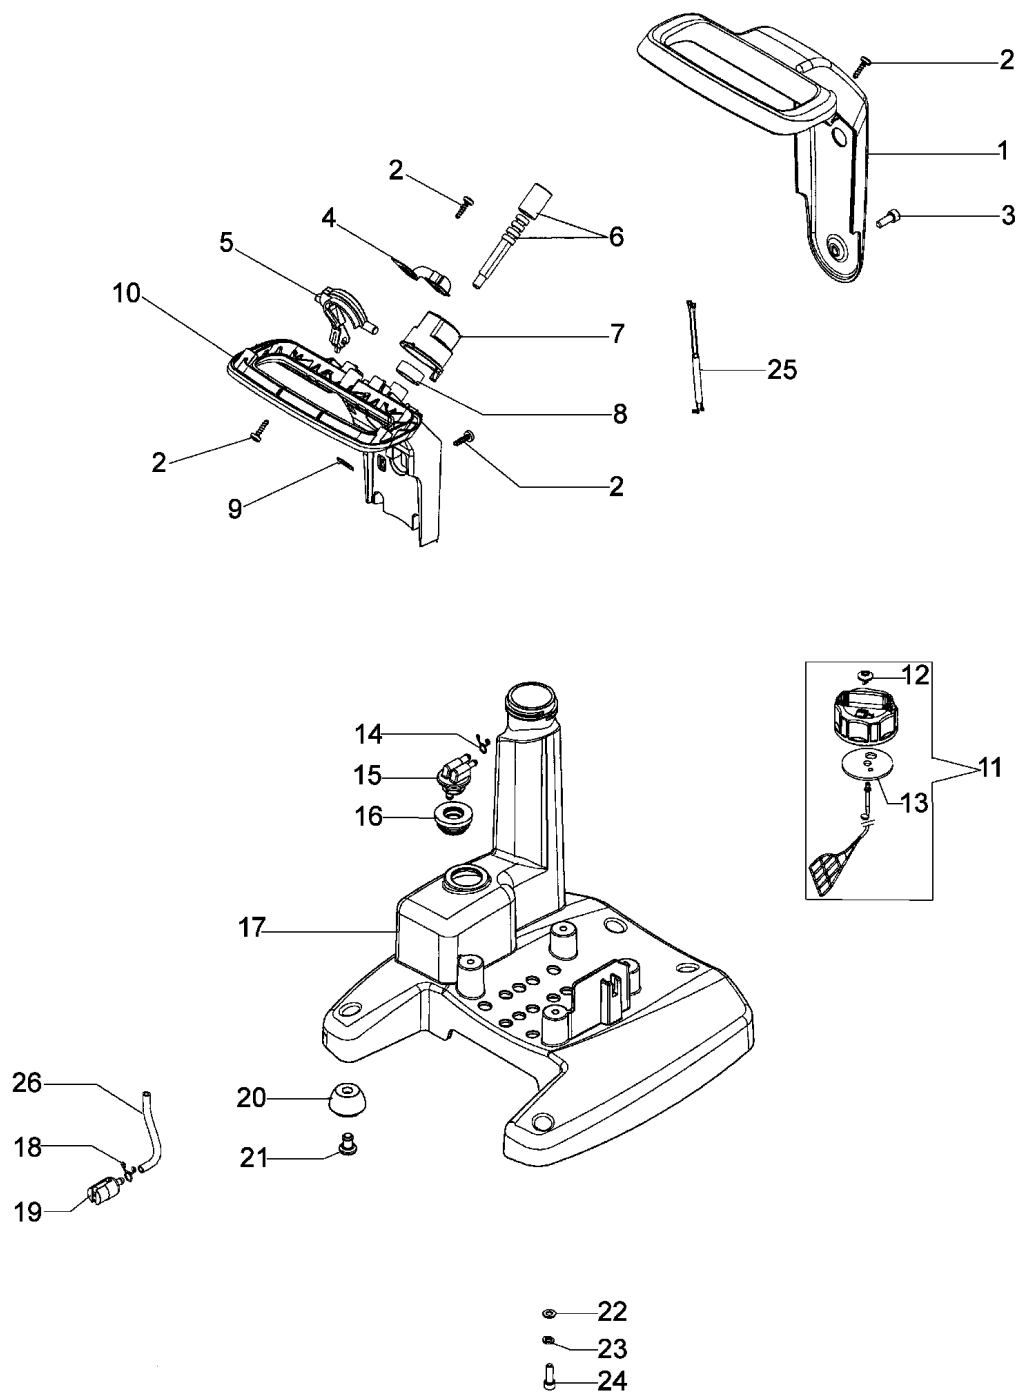


Иллюстрация Fuel tank and handle

Ссылка №	Кол-во	Код артикула	Наименование
1	1	55020004R	Half grip upper
2	12	3960142R	Screw
3	1	3801010R	Screw
4	1	55022023	Contact
5	1	55020005R	Complete throttle
6	1	55020007R	Screw
7	1	55020006R	Knob
8	1	55020037R	Ring
9	1	3057006R	Washer
10	1	55020003R	Half grip lower
11	1	55022004R	Tank cap
12	1	4098658AR	Breather valve
13	1	55020108R	Gasket
14	1	3059002	Band
15	1	4162270A	Fittings
16	1	4162268R	Bushing
17	1	55020081R	Tank
18	1	4098377R	Band
19	1	094600450R	Fuel filter
20	4	55020062R	AV-mount
21	4	4221012	Pin
22	4	3916005R	Washer
23	4	3819006R	Washer
24	4	3801011	Screw
25	1	55020094R	Cable
26	1	55020090R	Tube